



---

## CONTENTS

INTRODUCTION . . . . .	5
MODELS AVAILABLE . . . . .	5
ELECTRONIC OUTPUTS . . . . .	5
Scaled Pulse Output. . . . .	5
Display Options. . . . .	6
MECHANICAL INSTALLATION . . . . .	7
Installation for Direct Insert Models . . . . .	8
Installation for Hot Tap models . . . . .	10
PROGRAMMING . . . . .	14
CUSTOMER REFERENCE NUMBER TABLES . . . . .	16
K & OFFSET TABLES . . . . .	19



## INTRODUCTION

The Data Industrial SDI Series impeller flow sensor offers unparalleled performance for liquid flow measurement in closed pipe systems in an easy to install economical package. Impeller sensors offer a quick response to changes in flow rate and are well suited to flow control and batch type applications in addition to flow monitoring. The four-bladed impeller design is rugged, non-fouling and does not require custom calibration.

Coupled with the proprietary patented digital detection circuit, the sensor measures flows from 1.0 fps to over 20 fps, regardless of the conductivity or turbidity of the liquid.

The battery powered versions are a complete flow measuring system providing a programmable display of rate, total or both powered by a "C" sized lithium battery. Options include a scalable pulse output and a data logger.

## MODELS AVAILABLE

**Direct insert sensor models** are installed in piping configurations that are not in service or under pressure.

**Hot tap insert sensor models** feature isolation valves and mounting hardware to install or remove the sensor from a pipeline that would be difficult to shut down or drain. In a true "hot tap" installation the sensor is mounted in the pipe under pressure by attaching a service saddle or weld-on fitting to the pipe and mounting the isolating valve and nipple to the threaded connection. A hole is then cut in the wall of the pipe through the valve using a commercial tapping machine with a 1" size cutter. Once the hole is cut, the tapping machine is removed and the valve is shut. Then the sensor assembly is mounted to the isolation valve and extended into the pipeline to measure flow.

Even in new construction a hot tap sensor may be appropriate for service considerations.

The small stem diameter allows the sensor to be inserted into the pressurized pipeline by hand without the need for an installation tool. The mounting hardware holds the sensor firmly in place at the correct depth and alignment.

## ELECTRONIC OUTPUTS

### Scaled Pulse Output

The scaled pulse is produced by an on-board micro-controller for precise, accurate outputs. This option may be programmed to produce a transistor closure scaled to any number of engineering units of measure. Sensors may be pre-programmed at the factory or field programmed using a Data Industrial A303 connection cable and a Windows®-based software program. All information is stored in non-volatile memory in the flow sensor.

SDI Series Battery Operated Pricing Matrix

	SDI	0	D1	B	N	1	-	0	2	0	0
<b>Material</b>											
Stainless Steel / PPS Tip		0									
Brass / PPS Tip (not available with hot tap)		1									
Stainless Steel / PEEK Tip		2									
<b>Type</b>											
Direct Insert for Pipe 1-1/2" thru 10" *			D1								
Direct Insert for Pipe 12" thru 36" *			D2								
Direct Insert 36" and UP*			D3								
Hot Tap for Pipe 1-1/2" thru 10" *			H1								
Hot Tap for Pipe 12" thru 36" *			H2								
Hot Tap for Pipe 36" and UP *			H3								
<b>Electronic Housing</b>											
Battery Powered/NEMA 6				B							
<b>Output</b>											
No Output					N						
Scaled Pulse					2						
<b>Display</b>											
LCD Option						1					
Remote Display/NEMA 4X						2					
<b>O-Ring</b>											
Viton®								0			
<b>Shaft</b>											
Tungsten Carbide [Standard]									2		
Hastelloy® C-276 [optional - consult factory]									1		
Zirconia Ceramic [optional - consult factory]									0		
<b>Impeller</b>											
Stainless Steel										0	
<b>Bearing</b>											
Torlon®											0

\*Pipe size for reference only-Depending on pipe material, tapping saddle, or existing hardware, longer sensor length may be required. Consult Factory.  
For material details, consult the factory.

Figure 1: Ordering matrix

## Display Options

The eight character 3/8" LCD is mounted on the sensor visible through a lens at the top of the electronics housing.

An optional remote display is available where the LCD is located in a wall mount NEMA 4X enclosure. The remote may be connected to the flow sensor up to a maximum of 50 feet away using extension cables.

Cable Length	Part Number
5' extension cable	07101
10' extension cable	07108
20' extension cable	07102
50' extension cable	07109

Table 1: SDI remote cable part numbers

## MECHANICAL INSTALLATION

The accuracy of flow measurement for all insert type flow measuring devices is highly dependent on proper location of the sensor in the piping system. Irregular flow velocity profiles caused by valves, fittings, and pipe bends, can lead to inaccurate overall flow rate indications even though local flow velocity measurement may be accurate. A sensor located in the pipe that is partially full or where it can be affected by air bubbles, floating debris, or sediment may not achieve full accuracy and could be damaged.

Data Industrial flow sensors are designed to operate reliably under adverse conditions, but the following recommendations should be followed to ensure maximum system accuracy:


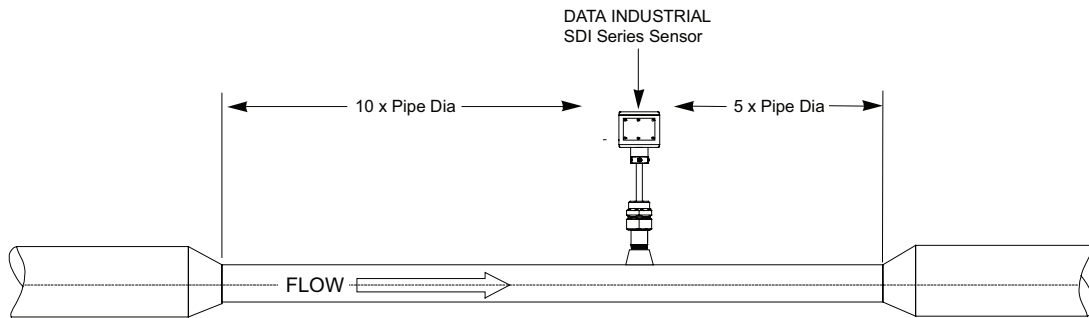


Figure 2: Minimum recommended straight run distance

1. Choose a location along the pipe where there is straight pipe for a distance of ten pipe diameters upstream and five pipe diameters downstream of the sensor. Pipe bends, valves, other fittings, pipe enlargements and reductions or anything else that would cause a flow disturbance should not be present in this length of pipe.
2. The recommended tap location around the circumference of a horizontal pipe is on top. If trapped air or debris will interfere, then the sensor should be located around the pipe from the top preferably not more than 45 degrees from top dead center. The sensor should never be located at the bottom of the pipe, as sediment may collect there. Locations off top dead center cause the impeller friction to increase, which may affect performance at low flow rates. Any circumferential location is correct for installation in vertical pipes.
3. Insertion depth is critical to accuracy. The algorithm used to convert impeller motion into flow was developed through flow tests in an independent calibration laboratory. The impeller must be located in the same position in the pipe as it was in the calibration test for the impeller frequency to accurately describe the same liquid velocity. Detailed installation instructions on the following pages include methods for ensuring correct insertion depth.
4. Alignment of the sensor is also important. The impeller shaft must be perpendicular to the flow for accuracy. Alignment instructions are also included on the following pages.

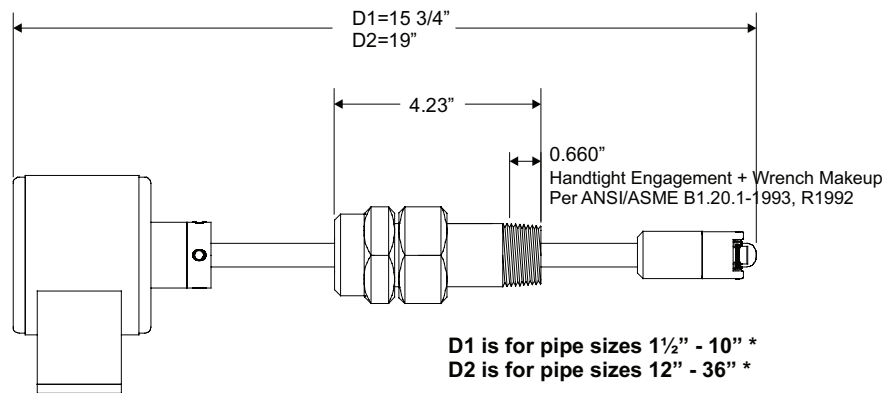

**\* Pipe sizes are for reference only - Depending on pipe material, tapping saddle, or existing hardware a longer sensor length may be required, Consult Factory.**

Figure 3: Direct insertion sensor dimensions

## Installation for Direct Insert Models

These instructions are for the installation of flow sensors into piping systems that are *not* under pressure at the time of installation. If the line must be tapped under pressure, a hot tap style sensor must be used. See following section for hot tap installation instructions.

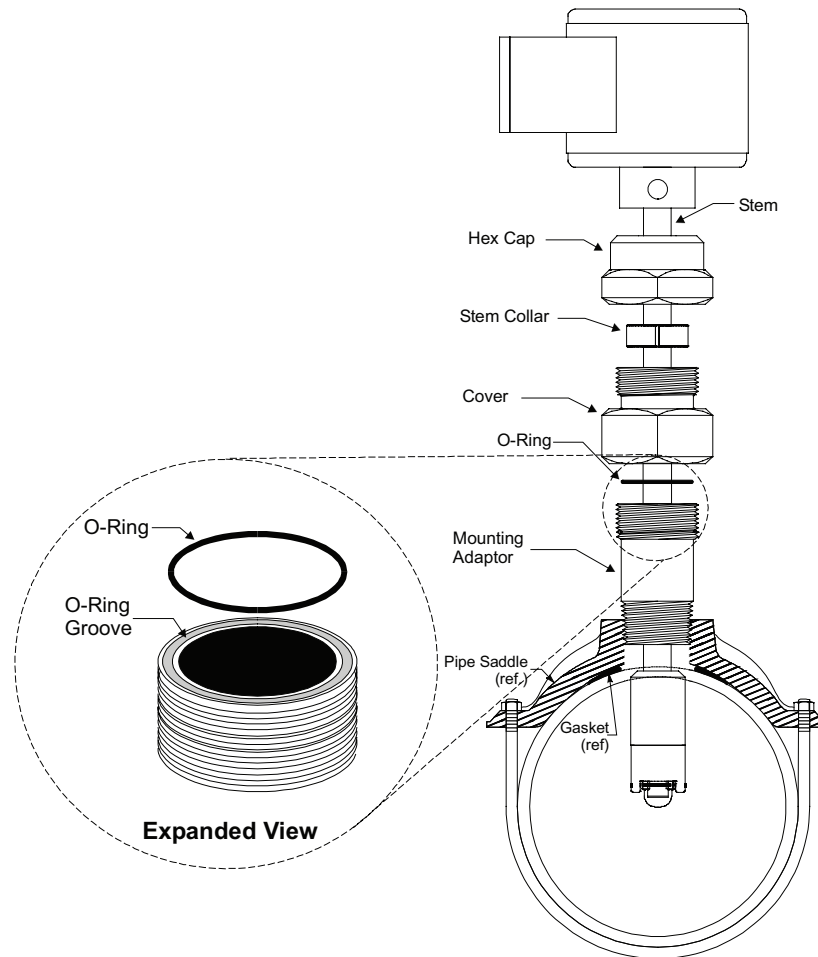


Figure 4: Installation for direct insert model

The insertion depth and alignment of the sensor are critical to the accuracy of the flow measurement. The impeller must be at the same location in the pipe as it was during calibration. Badger Meter provides sensors with different stem lengths. Longer stems are intended for use in larger diameter pipes and shorter stems for use in smaller pipelines. However, stem length has no effect on the operation of the sensor provided that the impeller is positioned correctly in the pipe.

Direct insert models are available in stem lengths designated D1 and D2. The D1 is intended for nominal pipe diameters from 1-1/2" to 10", and the D2 for pipe diameters from 12" to 36". However, pipe with extra thick walls, existing linings, or unusual tapping hardware may require longer length sensors. For these pipes, consult the factory. For larger pipe sizes, hot tap style sensors equipped with an isolation valves are recommended.

The preferred method of installation is by means of a saddle with 1" NPT outlet. On steel pipelines, a weld-on type fitting may be substituted.

1. Attach the saddle to a section of pipe that has at least ten diameters of straight pipe ahead and five diameters of straight pipe behind the saddle. Drill a minimum 1-1/8" diameter hole in the pipe.
2. Remove the sensor assembly from the mounting hardware by loosening the hex cap over the stem collar and the cover to the mounting adaptor and detaching the assembly. Set aside taking care not to damage impeller/shaft assembly.



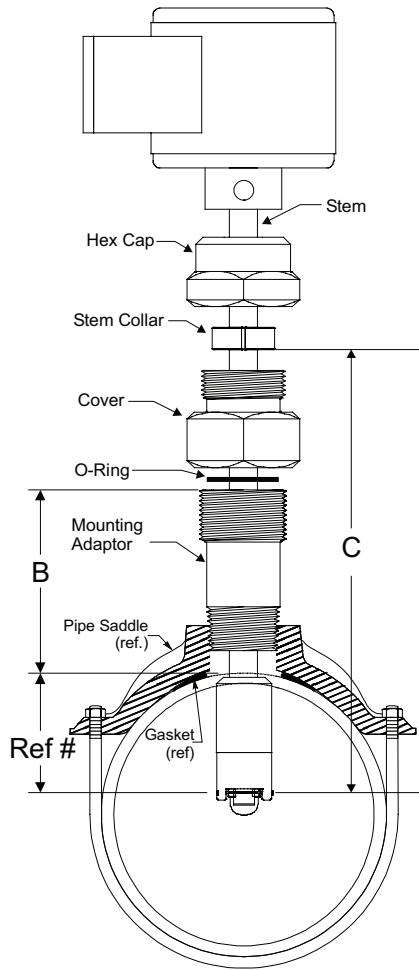


Figure 5: Dimensions B" and "C"

3. Attach the pipe thread end of the mounting adapter to the saddle or weld-o-let using a pipe joint compound and tighten the joint. *Do not apply sealing compound to the top thread of the mounting adapter. It is sealed with an O-ring.*
4. The sensor rotor assembly is to be located a fixed distance from the center of the pipe. To position the impeller at this depth, a reference measurement for the pipe size and schedule is used. Look up the pipe size and schedule number in **Table A** and note the reference number. Next, measure from the outside wall of the pipe to the top of the installed mounting adapter "B" in Figure 5. Add this number to the reference measurement.

The resulting number, "C" in Figure 5 is the distance from the recess of the sensor tip to the bottom of the stem collar. Insert the metal tab of a tape measure into the recess of the flow sensor tip. Extend the tape up the stem and mark the shaft with a pencil. Slide the collar along the shaft until its bottom surface is at the mark on the stem. Tighten the cap screw on the collar. When the sensor is reassembled, this will set the insertion depth of the sensor.

5. Attach the sensor to the mounting adapter by gently pushing the flow sensor into the mounting adapter until the cover touches the mounting adapter. Tighten the cover against the O-ring seal. This will seal the sensor assembly.
6. Continue to insert the flow sensor stem until the stem collar meets the cover. Thread the hex cap onto the mounting adapter but do not tighten. Align the flow sensor with the pipe by using the flat cover on the electronics housing as a guide. Place a straightedge along the cover and rotate the sensor until the straightedge is parallel with the pipe. Tighten the hex cap over the collar approximately 10 ft-lb. The hex cap holds the sensor alignment but performs no sealing functions. **DO NOT OVERTIGHTEN.**
7. Pressurize pipeline and check for leaks.

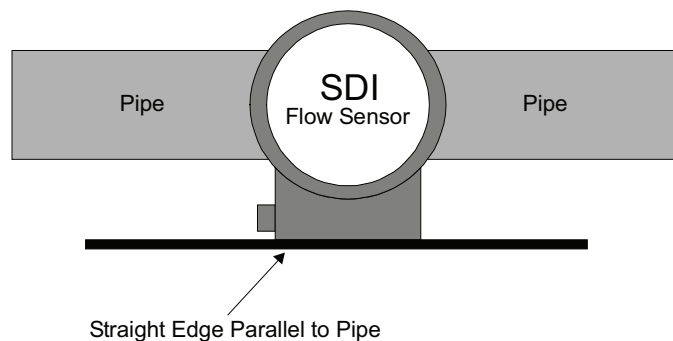


Figure 6: Level the sensor

## Installation for Hot Tap models

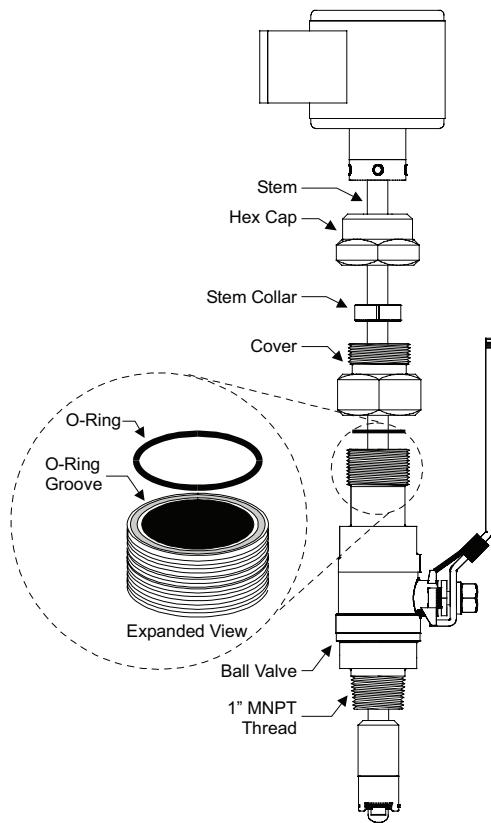



Figure 7: Installation for hot tap models

The insertion depth and alignment of the sensor are critical to the accuracy of the flow measurement. The impeller must be at the same location in the pipe as it was during calibration. Badger Meter provides sensors with three different stem lengths. Longer stems are intended for use in larger diameter pipes and shorter stems for use in smaller pipelines. However stem length has no effect on the operation of the sensor provided that the impeller is positioned correctly in the center of the pipe.

In [Figure 8](#), stem length H1 is intended for use in nominal pipe diameters from 1-1/2" to 10", H2 is for nominal pipe diameters from 12" to 36", and stem length H3 is for nominal pipe diameters from 36" and up. However, pipe with extra thick walls, existing linings, or unusual tapping hardware may require longer length sensors. For these pipe types, consult the factory.

The preferred method of installation is by means of a saddle with a 1" NPT outlet. On steel pipelines, a weld-on type fitting may be substituted.

1. Attach the saddle to a section of pipe that has at least 10 diameters of straight pipe ahead and five diameters of straight pipe behind the saddle.
2. Remove the sensor assembly from the mounting/isolation valve by loosening the hex cap over the stem collar and the cover to the mounting/isolation valve and detaching the assembly. Set the assembly aside, taking care not to damage impeller/shaft assembly.

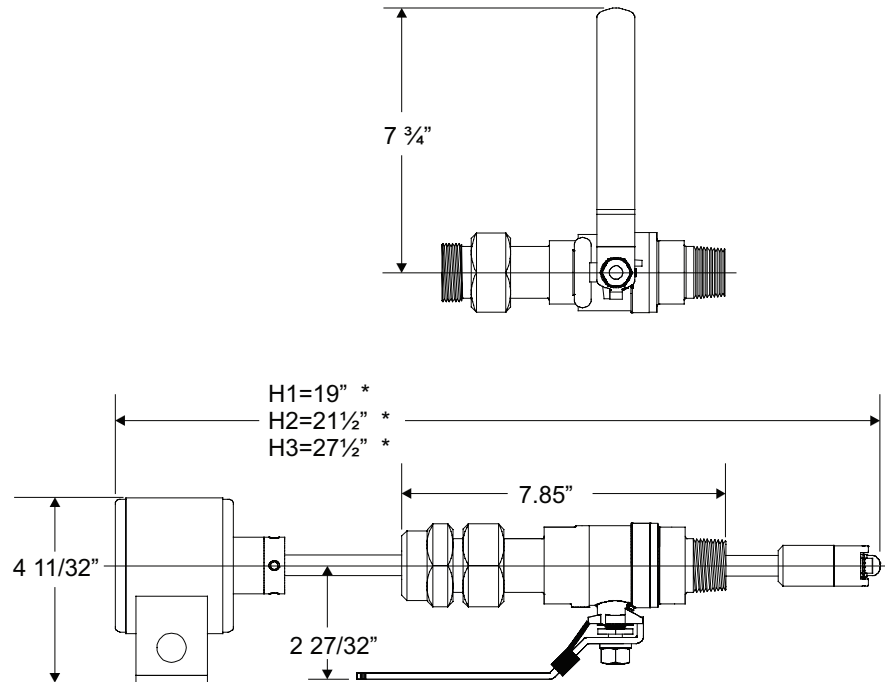

\* Pipe Sizes for reference only - Depending on pipe material, tapping saddle, or existing hardware longer sensor length may be required - Contact Factory.

Figure 8: Hot tap sensor dimensions

3. Attach the pipe thread end of the valve to the saddle using a pipe joint compound and tighten the joint. *Do not apply sealing compound to the top thread of the valve. It is sealed with an O-ring.*
4. Attach the tapping adapter, Badger Meter Data Industrial part number A-1027 to the top of the valve.
5. Any pipe tapping machine with a 1" pipe thread connection may be used. Use a cutter appropriate for the pipe material being tapped.
6. Attach the tapping machine to the tapping adapter. Ensure that all connections and seals are tight.
7. Slowly open the valve by rotating the handle 90° and lower the cutter past the valve ball to the pipe. Drill the 1" nominal hole according to the manufacturer's instructions. Withdraw the cutter past the valve ball, close the valve and remove the tapping tool.
8. Remove the tapping adapter from the top of the valve.
9. The sensor rotor assembly is to be located a fixed distance from the center of the pipe. To position the impeller at this depth, a reference measurement for the pipe size and schedule is used. Look up the pipe size and schedule number in "[Customer Reference Number Tables](#)" on page 16 and note the reference number. Next, measure from the outside wall of the pipe to the top of the ball valve "B" in [Figure 9](#). Add this number to the reference measurement. The resulting number is the distance from the recess of the sensor tip to the bottom of the stem collar "C" in [Figure 9](#).
10. Insert the metal tab of a tape measure into the recess of the flow sensor tip. Extend the tape up the stem and mark the shaft with a pencil.
11. Slide the collar along the shaft until its bottom surface is at the mark on the stem.
12. Tighten the cap screw on the collar. When the sensor is reassembled, this will set the insertion depth of the sensor.

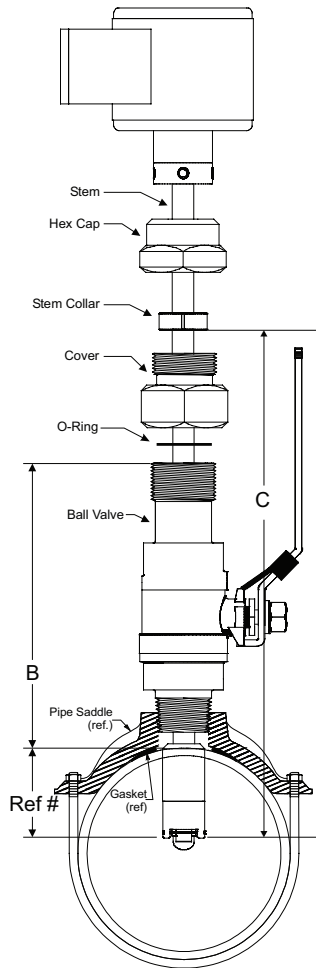


Figure 9: Sensor tip and stem collar

13. Slide the cover down the stem until it stops.
14. Attach the sensor to the valve by inserting the impeller end of the stem into the valve until the cover touches the top of the valve. The sensor tip and impeller will be in the section of the valve above the ball.
15. Tighten the cover against the O-ring in the top of the valve. This will seal the sensor assembly.
16. Open the ball valve again by slowly rotating the handle 90°. If the cover was not at the bottom of the sensor stem, water pressure from the pipe would now push it out until it stops. However, the sensor cannot be ejected from the pipe if the cover is secured to the valve. Check to make sure all joints are tight.
17. Insert the flow sensor stem into the pipe by pushing against the top of the electronics housing with a slight twisting motion until the stem collar meets the cover. The force required to push the sensor into the pipeline is approximately 20% of the line pressure. Be aware of the close spacing between the diameter of the flow sensor, the bore of the ball valve and the hole in the pipe. If the sensor stops or “catches” before the stem collar meets the cover, apply a gentle rocking/twisting motion to the sensor to continue its travel.
18. While holding the flow sensor collar against the cover, thread the hex cap onto the cover to hold the flow sensor in place but do not tighten. Align the flow sensor with the pipe by using the flat side cover of the electronics housing as a guide. Place a straightedge along the cover and rotate the sensor until the straightedge is parallel to the pipe. Tighten the hex cap to the cover to approximately 10 ft-lb. The hex cap holds the sensor alignment and depth but performs no sealing functions.  
**DO NOT OVERTIGHTEN.**
19. Pressurize pipeline and check for leaks.

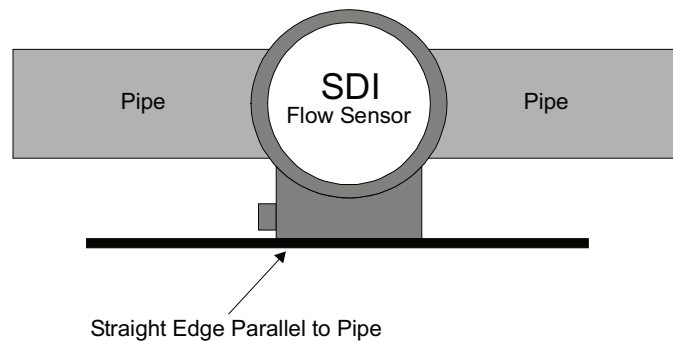


Figure 10: Level the sensor

## Removing the Side Cover

Figure 11

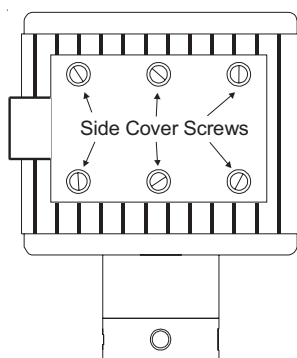


Figure 11: Remove the side cover

There are 6 screws to remove from the side cover / battery holder. To remove the side cover, use a screwdriver to unscrew each cover screw counterclockwise. These screws are captive so they will not fall out of the cover. Use care when replacing the side cover to insure that the O-ring is in place.

**DO NOT REMOVE CIRCULAR COVER** from top of sensor. You may disturb seal and label alignment.

## Battery Replacement – Local Display Option

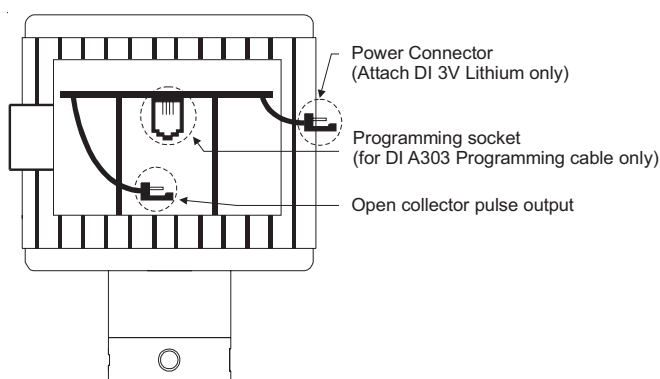


Figure 12: Battery replacement, local display

Although the Battery Powered SDI has up to a 5 year battery life, there will be a time when the battery needs to be replaced.

The battery is located inside the blue housing on the end of the flow sensor accessible by removing the side cover / battery holder. The battery is held in a spring clip attached to the cover. The required battery is a 3V lithium "C" size that can be purchased through Badger Meter.

The battery supplied by Badger Meter has the connector required to plug it into the power header. See [Figure 12](#) for the power header location.

## Battery Replacement – Remote display option

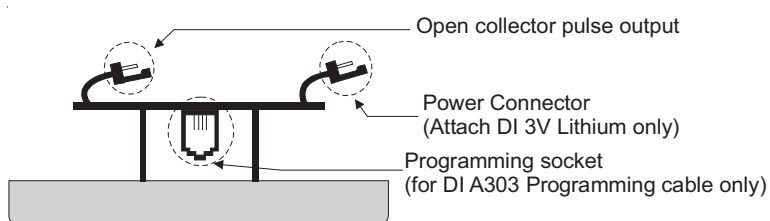


Figure 13: Battery replacement, remote display

The battery is located inside the remote display housing. Loosen the 1/4 turn fasteners at the corners of the cover. Open the enclosure to locate the "C" size lithium battery held on by a spring clip. Disconnect the battery from the header and remove battery from clip. Reverse this procedure to install new battery. See [Figure 13](#) for the power header location.

## Wiring Pulse Output

The optional pulse output of the Battery Powered SDI is a scaled pulse output that is set in the programming software. The output type is an open collector transistor closure with a maximum sinking current of 100 mA.

## PROGRAMMING

Programming the Badger Meter Series SDI is accomplished by installing the Data Industrial programming software on a computer and entering data on templates of the Windows® based program.

1. Load the interface software into the computer.
2. Connect the PC to the SDI with the Data Industrial A303 communications cable. Plug in the RJ11 plug on the A-303 cable to the RJ11 socket on Battery Powered SDI. Connect the DB9 connector of the A303 cable to the PC COMM port to a PC that has the SDI software installed.
3. Open the interface software and select the appropriate COMM PORT as shown in the dialog box below.



4. Open the Parameters Screen as shown below.



5. Program the parameters using the following screens as reference.

**Step #1**

Enter in a "K" number found in **Table B**.

**Step #2**

Enter in a "offset" number found in **Table B**.

**Step #5**

Optional setting, Enter in the gallons/pulse and select pulse width. Skip this step if not using the Scaled pulse output

**Step #6**

Press Send to transmit calibration data to the SDI Sensor. **See Note #1**

**Step #3**

Select the desired flow rate and total units.


**Step #4**

Select the desired display readout mode.

Press to reset all parameters back to factory defaults. Send must be pressed to send this data to the SDI.


**Step #7**

Press to exit parameters screen and to go back to the main screen. **See Note #2**

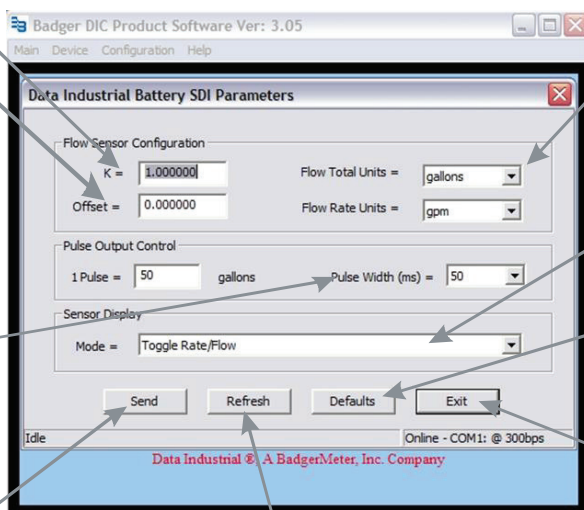

Press to retrieve calibration data from SDI.

**NOTE #1** After **Send** is pressed it could take up to one and a half minutes to program the Battery Powered SDI. The illustration below shows the programming process bar. When the programming process bar disappears and the status bar says "updated", the Battery Powered SDI is programmed.

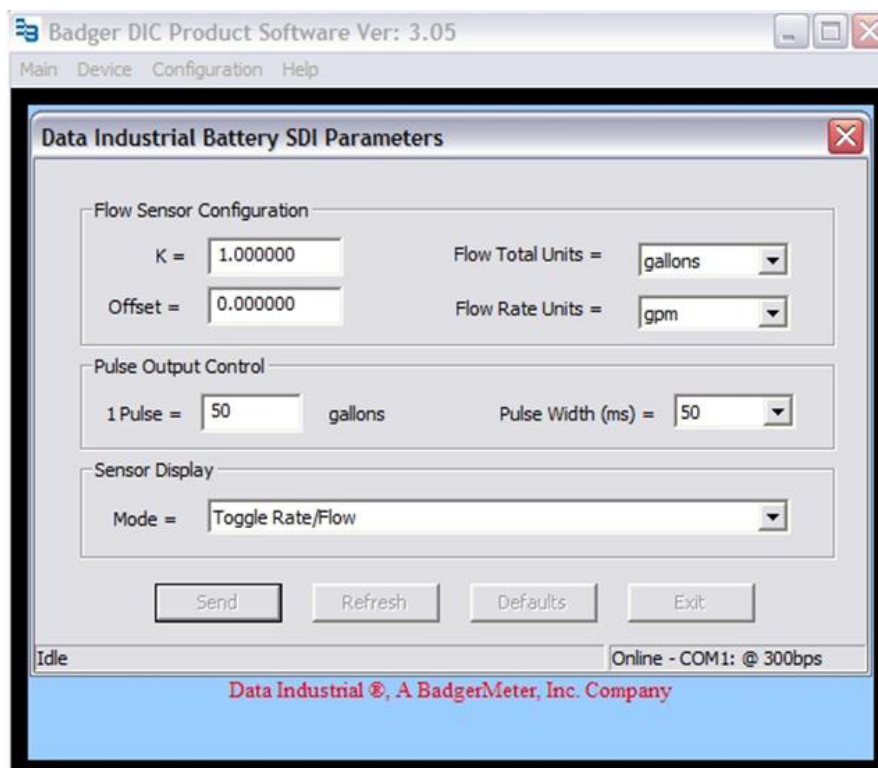

**NOTE #2** After the **Exit** is pressed it takes about 10 seconds to go back to the operating display and refresh flow rate and flow total.

## CUSTOMER REFERENCE NUMBER TABLES

Table A1 – Customer Reference Number								
Pipe			Pipe Schedules					
Size	O.D.	Description	10	10s	40	40s/Std	80	SDR21
1-1/2"	1.900	Wall Insertion Depth Customer Ref #	0.109 0.58 1-9/16	0.109 0.58 1-9/16	0.145 0.54 1-9/16	0.145 0.54 1-9/16	0.200 0.49 1-9/16	—
2"	2.375	Wall Insertion Depth Customer Ref #	0.109 0.81 1-13/16	0.109 0.81 1-13/16	0.154 0.77 1-13/16	0.154 0.77 1-13/16	0.218 0.71 1-13/16	0.113 0.81 1-13/16
2-1/2"	2.875	Wall Insertion Depth Customer Ref #	0.120 1.05 2-1/16	0.120 1.05 2-1/16	0.203 0.97 2-1/16	0.203 0.97 2-1/16	0.276 0.90 2-1/16	0.137 1.04 2-1/16
3"	3.500	Wall Insertion Depth Customer Ref #	0.120 1.37 2-3/8	0.120 1.37 2-3/8	0.216 1.27 2-3/8	0.216 1.27 2-3/8	0.300 1.19 2-3/8	0.167 1.32 2-3/8
4"	4.500	Wall Insertion Depth Customer Ref #	0.120 1.70 2-11/16	0.120 1.70 2-11/16	0.237 1.61 2-23/32	0.237 1.61 2-23/32	0.337 1.53 2-3/4	0.214 1.63 3-1/8
5"	5.563	Wall Insertion Depth Customer Ref #	0.134 1.59 2-5/8	0.134 1.59 2-5/8	0.258 1.51 2-21/32	0.258 1.51 2-21/32	0.375 1.44 2-11/16	—
6"	6.625	Wall Insertion Depth Customer Ref #	0.134 1.91 2-29/32	0.134 1.91 2-29/32	0.280 1.82 2-31/32	0.280 1.82 2-31/32	0.432 1.73 3-1/32	0.316 1.83 3-1/32
8"	8.625	Wall Insertion Depth Customer Ref #	0.148 2.50 3-17/32	0.148 2.50 3-17/32	0.322 2.39 3-19/32	0.322 2.39 3-19/32	0.500 2.29 3-21/32	0.410 2.40 3-11/16
10"	10.750	Wall Insertion Depth Customer Ref #	0.165 3.13 4-5/32	0.165 3.13 4-5/32	0.365 3.01 4-1/4	0.365 3.01 4-1/4	0.594 2.87 4-11/32	0.511 2.98 4-3/8
12"	12.750	Wall Insertion Depth Customer Ref #	0.180 3.72 4-25/32	0.180 3.72 4-25/32	0.406 3.58 4-7/8	0.375 3.60 4-27/32	0.688 3.41 5	0.606 3.52 5
14"	14.000	Wall Insertion Depth Customer Ref #	0.250 2.03 3-5/32	0.188 2.04 3-3/32	0.438 1.97 3-9/32	0.375 1.99 3-1/4	0.750 1.88 3-1/2	—
16"	16.000	Wall Insertion Depth Customer Ref #	0.250 2.33 3-7/16	0.188 2.34 3-13/32	0.500 2.25 3-5/8	0.375 2.29 3-17/32	0.844 2.15 3-7/8	—
18"	18.000	Wall Insertion Depth Customer Ref #	0.250 2.63 3-3/4	0.188 2.64 3-23/32	0.562 2.53 3-31/32	0.375 2.59 3-27/32	0.938 2.42 4-1/4	—
20"	20.000	Wall Insertion Depth Customer Ref #	0.250 2.93 4-1/16	0.218 2.94 4-1/32	0.594 2.82 4-9/32	0.375 2.89 4-1/8	1.031 2.69 4-19/32	—
22"	22.000	Wall Insertion Depth Customer Ref #	0.250 3.23 4-11/32	—	—	0.375 3.19 4-7/16	1.125 2.96 4-31/32	—

For sizes above 30", consult factory. Pipe O.D. & Schedule, or pipe O.D. & I.D., or pipe O.D. & wall thickness is required.  
A blank cell (—) = No data at time of printing.



**Table A1 – Customer Reference Number**

Pipe			Pipe Schedules					
Size	O.D.	Description	10	10s	40	40s/Std	80	SDR21
24"	24.000	Wall Insertion Depth Customer Ref #	0.250 3.53 4-21/32	0.250 3.53 4-21/32	0.688 3.39 4-31/32	0.375 3.49 4-3/4	1.219 3.23 5-5/16	—
26"	26.000	Wall Insertion Depth Customer Ref #	—	0.312 3.81 5	—	0.375 3.79 5-1/32	—	—
28"	28.000	Wall Insertion Depth Customer Ref #	—	0.312 4.11 5-9/32	—	0.375 4.09 5-11/32	—	—
30"	30.000	Wall Insertion Depth Customer Ref #	0.312 4.41 5-19/32	0.312 4.41 5-19/32	—	0.375 4.39 5-5/8	—	—

For sizes above 30", consult factory. Pipe O.D. & Schedule, or pipe O.D. & I.D., or pipe O.D. & wall thickness is required.

A blank cell ( — ) = No data at time of printing.

**Table A2 – Customer Reference Number**

Copper Tube			Type			
Size	O.D.	Description	K	L	M	DWV
1-1/2"	1.625	Wall Insertion Depth Customer Ref #	0.072 0.48 1-7/16	0.060 0.49 1-7/16	0.049 0.50 1-7/16	0.042 0.51 1-7/16
2"	2.125	Wall Insertion Depth Customer Ref #	0.083 0.72 1-11/16	0.070 0.73 1-11/16	0.058 0.74 1-11/16	0.042 0.76 1-11/16
2-1/2"	2.625	Wall Insertion Depth Customer Ref #	0.095 0.95 1-29/32	0.080 0.97 1-29/32	0.065 0.98 1-29/32	—
3"	3.125	Wall Insertion Depth Customer Ref #	0.109 1.19 2-3/16	0.090 1.21 2-3/16	0.072 1.23 2-3/16	0.045 1.25 2-3/16
4"	4.125	Wall Insertion Depth Customer Ref #	0.134 1.54 2-9/16	0.110 1.56 2-9/16	0.095 1.57 2-17/32	0.058 1.60 2-17/32
6"	6.125	Wall Insertion Depth Customer Ref #	0.192 1.72 2-25/32	0.140 1.75 2-3/4	0.122 1.76 2-3/4	0.083 1.79 2-3/4

A blank cell ( — ) = No data at time of printing.

**Table A3 – Customer Reference Number**

Ductile Iron	
	Because of the variety of iron pipe classes, sizes, and wall thicknesses, consult the factory for customer reference number. Pipe O.D. & Schedule, or pipe O.D. & I.D., or Pipe O.D. and wall thickness is required.

<b>Table A4 – Customer Reference Number</b>			
<b>PVC AWWA C900</b>			<b>CL100</b>
<b>Size</b>	<b>O.D</b>	<b>Description</b>	
4"	4.800	Wall Insertion Depth Customer Ref #	0.192 1.77 2-27/32
6"	6.900	Wall Insertion Depth Customer Ref #	0.276 1.90 3-1/16
8"	9.050	Wall Insertion Depth Customer Ref #	0.362 2.50 3-23/32
10"	11.100	Wall Insertion Depth Customer Ref #	0.444 3.06 4-3/8
12"	13.200	Wall Insertion Depth Customer Ref #	0.528 3.64 5-1/16

For other types of pipe not listed above, consult the factory. Pipe O.D. & Schedule, or pipe O.D. & I.D., or Pipe O.D. and wall thickness is required.

# K & OFFSET TABLES

Table B1 – Estimated* K & Offset										
Pipe			Pipe Schedules							
Size	O.D.		CS 5	SS 5	CS 10	SS 10	CS 40	SS 40	CS 80	SS 80
1-1/2"	1.900	K Offset	0.427271 -0.080605	0.427271 -0.080605	0.380552 0.002211	0.380552 0.002211	0.341075 0.081460	0.341075 0.081460	0.277850 0.226312	0.277850 0.226312
2"	2.375	K Offset	0.673452 -0.380524	0.673452 -0.380524	0.626407 -0.332296	0.626407 -0.332296	0.579615 -0.282874	0.579615 -0.282874	0.514211 -0.206396	0.514211 -0.206396
2-1/2"	2.875	K Offset	0.965024 -0.749072	0.965024 -0.749072	0.911744 -0.667702	0.911744 -0.667702	0.802796 -0.522645	0.802796 -0.52264	0.716671 -0.425526	0.716671 -0.425526
3"	3.500	K Offset	1.582350 -2.113500	1.582350 -2.113500	1.490176 -1.870796	1.490176 -1.870796	1.277418 -1.355648	1.277418 -1.355648	1.118942 -1.022076	1.118942 -1.022076
3-1/2"	3.500	K Offset	2.091068 -1.399853	2.091068 -1.399853	2.024960 -2.010633	2.024960 -2.010633	1.856175 -4.014395	1.856175 -4.014395	1.621456 -2.219542	1.621456 -2.219542
4"	4.500	K Offset	2.635261 1.524904	2.635261 1.524904	2.544009 1.224082	2.544009 1.224082	2.279943 -0.029050	2.279943 -0.029050	2.083741 -1.463673	2.083741 -1.463673
5"	5.563	K Offset	4.254704 1.040171	4.254704 1.04017	4.158287 1.265404	4.158287 1.265404	3.705163 2.073017	3.705163 2.073017	3.315944 2.362615	3.315944 2.362615
6"	6.625	K Offset	6.703921 -8.690330	6.703921 -8.690330	6.571415 -8.020263	6.571415 -8.020263	5.831518 -4.525378	5.831518 -4.525378	5.122780 -1.645774	5.122780 -1.645774
8"	8.625	K Offset	9.810699 4.373516	9.810699 4.373516	9.631116 4.521076	9.631116 4.521076	8.862069 5.253952	8.862069 5.253952	8.129755 6.129664	8.129755 6.129664
10"	10.750	K Offset	15.558041 2.693802	15.558041 2.693802	15.359217 2.681251	15.359217 2.681251	14.116608 2.693176	14.116608 2.693176	12.779132 2.904373	12.779132 2.904373
12"	12.750	K Offset	22.687525 5.074024	22.687525 5.074024	22.492687 4.969576	22.492687 4.969576	20.707010 4.099617	20.946699 4.206793	18.603270 3.302154	19.990417 3.798262
14"	14.000	K Offset	28.113718 8.609697	28.113718 8.609697	27.254274 7.977566	27.819418 8.390513	25.581423 6.819905	25.581423 6.819905	22.940674 5.212368	25.043200 6.469292
16"	16.000	K Offset	38.108196 17.436071	38.108196 17.436071	37.184074 16.524164	37.856899 17.186449	34.538799 14.010489	35.847870 15.235909	31.076347 10.962554	34.538799 14.010489
18"	18.000	K Offset	49.922424 30.346106	49.922424 30.346106	48.850674 29.092361	49.631184 30.003992	45.024284 24.739450	47.297367 27.301405	40.637650 20.013815	45.771198 25.573288
20"	20.000	K Offset	59.821514 3.372809	59.821514 3.372809	59.821514 3.372809	59.459480 3.378817	54.939907 3.459857	57.568302 3.411363	51.637486 32.381599	56.066704 3.438600
22"	22.000	K Offset	72.009399 3.211272	72.009399 3.211272	71.246956 3.219100	71.640358 3.215024	(69.712502) (3.235763)	—	60.582455 3.360413	—
24"	24.000	K Offset	84.054832 3.126430	84.054832 3.126430	83.653954 3.128100	83.653954 3.128100	78.190941 3.158703	82.090302 3.135363	71.628067 3.215150	80.530304 3.143800
26"	26.000	K Offset	—	—	95.504044 3.111093	—	(94.701706) (3.110163)	—	—	—
28"	28.000	K Offset	—	—	108.363754 3.165831	—	(107.546707) (3.160163)	—	—	—
30"	30.000	K Offset	122.276558 3.306300	122.276558 3.306300	121.457077 3.295768	121.457077 3.295768	(120.625305) (3.285363)	—	—	—

For sizes above 30", consult factory. Pipe O.D. & Schedule, or pipe O.D. & I.D., or pipe O.D. & wall thickness is required.

CS = Carbon Steel

SS = Stainless Steel

\* = Estimations are based on nominal I.D. from standard ASME B36.10 and B36.19

() = Standard Schedule

A blank cell (—) = No data at time of printing.

Table B2 – Estimated* K & Offset						
Copper Tube			Type			
Size	O.D.		K	L	M	DMW
1-1/2"	1.625	K Offset	—	0.277993 0.063685	—	—
2"	2.125	K Offset	—	0.509285 -0.043054	—	—
2-1/2"	2.625	K Offset	—	0.784450 -0.126200	—	—
3"	3.125	K Offset	—	1.177171 0.198965	—	—
4"	4.125	K Offset	—	1.750507 4.142096	—	—
5"	5.125	K Offset	—	3.587835 0.198965	—	—
6"	6.125	K Offset	5.041780 0.198965	4.298570 3.295640	—	—

A blank cell ( — ) = No data at time of printing.

Table B3 – Estimated* K & Offset	
<b>Ductile Iron</b>	Because of the variety of iron pipe classes, sizes, and wall thicknesses, consult the factory for customer reference number. Pipe O.D. & Schedule, or pipe O.D. & I.D., or Pipe O.D. and wall thickness is required.

Table B4 – Estimated* K & Offset			
PVC Municipal C900			Schedules
Size	O.D.		100
4"	4.800	K Offset	—
6"	6.900	K Offset	—
8"	9.050	K Offset	—
10"	11.100	K Offset	—
12"	13.200	K Offset	—

For other types of pipe not listed above, consult the factory. Pipe O.D. & Schedule, or pipe O.D. & I.D., or Pipe O.D. and wall thickness is required.

A blank cell ( — ) = No data at time of printing.

## SPECIFICATIONS

<b>Wetted Materials</b>	
Sensor stem, mounting adapter, isolation valve, and nipple	316 Stainless steel
Sensor Tip	Polyphenylene sulfide (PPS)
O-rings, Bearings, Shaft	See ordering matrix
<b>Maximum Temperature Ratings</b>	
Fluid Measured	300° F (135° C) continuous service
Operating Temperature: Electronics	150° F (65° C)
Operating Temperature: LCD	150° F (65° C)
<b>Maximum Pressure Rating</b>	1000 psi @ 100° F, 900 psi @ 200° F, 750 psi @ 300° F
<b>Recommended Design Flow Range</b>	1...20 ft/s
<b>Pressure Drop</b>	0.5 psi or less @ 10 ft/s for all pipe sizes 1.5" diameter and up
<b>Accuracy</b>	Standard calibration to $\pm 5\%$ of rate Custom wet calibration $\pm 1\%$ of rate
<b>Straight Pipe Requirement</b>	Install sensor in straight pipe section with a minimum distance of 10 diameters upstream and 5 diameters downstream to any bend, transition, or obstruction
<b>Repeatability</b>	$\pm 0.5\%$
<b>Enclosure – Sensor</b>	Polypropylene with Viton® sealed cover. Meets NEMA 6P specifications
<b>Enclosure – Remote</b>	Polypropylene with Neoprene® sealed cover. Meets NEMA 4X specifications
<b>Programming</b>	All programmable models use Data Industrial A-303 connector cable and SDI Series software
<b>Display (optional)</b>	8-character, 3/8" LCD STN (Super Twisted Nematic) display Annunciators for rate, total, input, output flow direction for bidirectional models
<b>Accessories</b>	ASDI Programming Kit A1027 Hot Tap Adapter Nipple 07101 5' Extension Cable 07102 20' Extension Cable 07108 10' Extension Cable 07109 50' Extension Cable
<b>Options</b>	Pulse output

**INTENTIONAL BLANK PAGE**

**INTENTIONAL BLANK PAGE**

Data Industrial is a registered trademark of Badger Meter, Inc. Other trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2013 Badger Meter, Inc. All rights reserved.

[www.badgermeter.com](http://www.badgermeter.com)

---

**The Americas | Badger Meter** | 4545 West Brown Deer Rd | PO Box 245036 | Milwaukee, WI 53224-9536 | 800-876-3837 | 414-355-0400  
**México | Badger Meter de las Americas, S.A. de C.V.** | Pedro Luis Ogazón N°32 | Esq. Angelina N°24 | Colonia Guadalupe Inn | CP 01050 | México, DF | México | +52-55-5662-0882  
**Europe, Middle East and Africa | Badger Meter Europa GmbH** | Nurtinger Str 76 | 72639 Neuffen | Germany | +49-7025-9208-0  
**Czech Republic | Badger Meter Czech Republic s.r.o.** | Mařikova 2082/26 | 621 00 Brno, Czech Republic | +420-5-41420411  
**Slovakia | Badger Meter Slovakia s.r.o.** | Raciarska 109/B | 831 02 Bratislava, Slovakia | +421-2-44 63 83 01  
**Asia Pacific | Badger Meter** | 80 Marine Parade Rd | 21-04 Parkway Parade | Singapore 449269 | +65-63464836  
**China | Badger Meter** | 7-1202 | 99 Hangzhong Road | Minhang District | Shanghai | China 201101 | +86-21-5763 5412

Legacy Document Number: 872042