

5318B Calibration Steps

The following steps are intended for the calibration of a 5318B with the function of the unit for high or low level. The unit should be on the running mode screen (see figure 1) before starting the calibration steps. This is to be used as a guide. Functionality of the unit should be checked after calibration.



Figure 1

Low Level Calibration

1. Set the ALARM MODE to LLFS, Press **DN RT DN DN DN RT RT UP RT**
2. Return to running screen, Press **LT LT**
3. Calibrate for Low Level in Control Mode, Press **DN DN RT RT DN DN DN DN DN DN RT RT RT**
4. Adjust Low Level Set-point up 0.5%, Press **DN RT DN RT RT UP UP UP UP RT**
5. Return to running screen, Press **LT LT**

High Level Calibration

1. Set the ALARM MODE to HLFS, Press **DN RT DN DN DN RT RT DN RT**
2. Return to running screen, Press **LT LT**
3. Calibrate for High Level in Control Mode, Press **DN DN RT RT DN DN DN DN DN DN RT RT RT**
4. Adjust Low Level Set-point up 0.5%, Press **DN RT RT RT UP UP UP UP RT**
5. Return to running screen, Press **LT LT**