

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE

LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

INTRODUCTION

The instruction manual is the proper document to be used for the installation, setup and calibration of the Model 7000 Excalibur. However, due to the instruction manual's size and the number of options, it gives the appearance of being very complicated and tends to be intimidating. Therefore, this document was created to provide a simplified illustration of various setup and calibration procedures based upon the type of measurement desired. Only illustrations of the more common types of measurements are shown here, however, they may still be of some help. This document is not intended to replace the instruction manual and is not applicable unless the control unit, PFM Transmitter and probe have been properly installed.

If the instrument is to be used as a PID controller, first perform the setup and calibration with the PID control off as specified in this guide. Then refer to the setup & calibration guide for the PID Controller.

The key to understanding the Model 7000 is knowing how to navigate through the menu. The following describes the various displays and keys used for setup and calibration:

DISPLAYS




VFD Line 1 – indicates the mode to be setup or calibrated.

VFD Line 2 – indicates the sub-mode and/or value being entered.

KEYS



To put the instrument into the setup mode.



To put the instrument into the calibrate mode.




To put the instrument into a sub-mode and to store data.



To scroll up through the menu.



To scroll down through the menu.



To enter data.



To return to the previous mode (to back out of a mode). Also used to erase a keypad entry before pressing the ENTER key.

HELPFUL HINTS

- *Scrolling, as indicated by either \triangle or ∇ can be done in either direction regardless of the direction shown.
- *After energizing the instrument, but before starting the setup and calibration procedure, check to make sure that the LED in the PFM Transmitter is pulsing.
- *If attempts were made to setup and calibrate the instruments and it is desirable to return to the default condition, perform the initialization procedure (Initialize database).
- *Do not be concerned with the error light before setup and calibration is complete.
- *Do not be concerned if "WARNING Excessive Head Height" briefly flashes on the VFD before performing the input.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME


INITIALIZE DATABASE

KEYPAD ENTRY	REMARKS
SETUP	Access Level appears in VFD line 2.
ENTER	— Limited appears in VFD line 2.
LAST ▽	— Scroll until Full appears in VFD line 2.
ENTER	— Password? Appears in VFD. *****->
NUMERIC	— Enter password using appropriate keys. 12345 is default password
ENTER	— Full appears in VFD line 2.
CLEAR	— Access Level appears in VFD line 2.
LAST ▽	— Scroll until Diagnostics appears in VFD line 2.
ENTER	— PFM Input Test appears in VFD line 2.
LAST ▽	— Scroll until Initialize Database appears in VFD line 2.
ENTER	— All Except PFM Input appears in VFD line 2.
LAST ▽	— Scroll until Full Initialization appears in VFD line 2.
ENTER	— Initialize Database appears in VFD line 2 after a short wait.
CLEAR	— Diagnostics appears in VFD line 2.
CLEAR	— VFD line 2 is blank.

Initialization complete.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

SETUP AND CALIBRATION

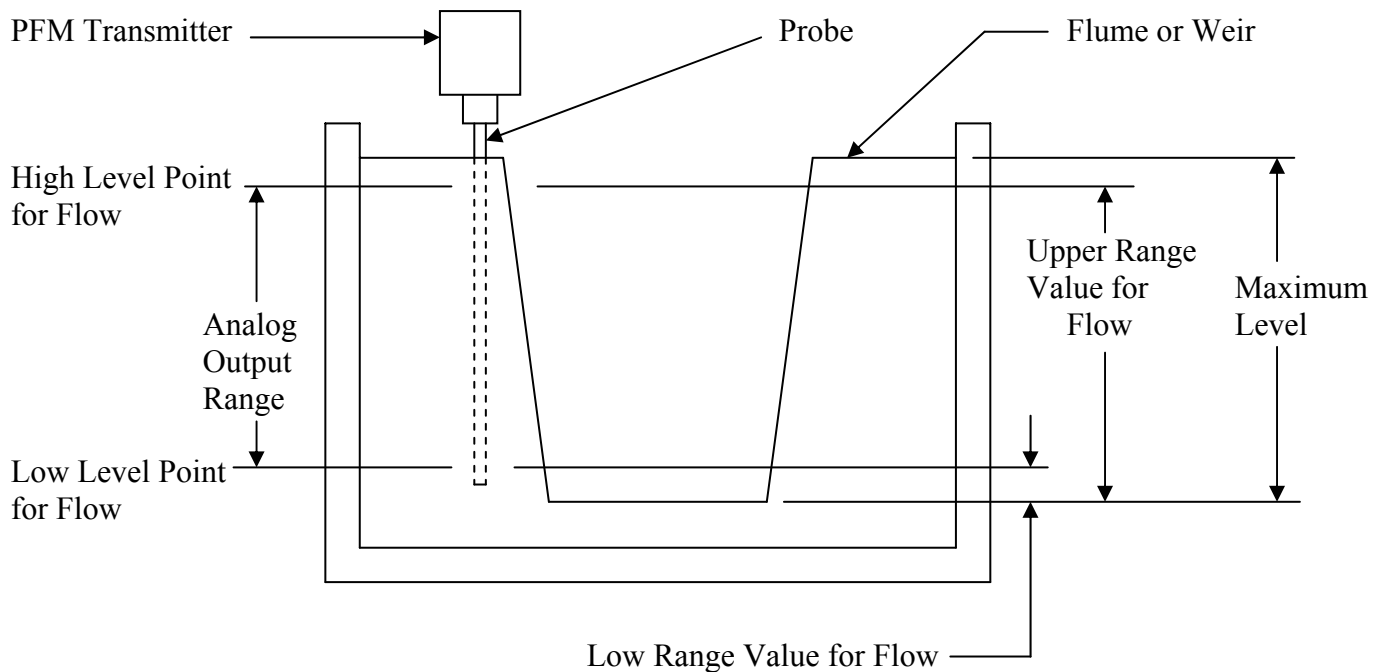

Determine the Maximum Level. This is the highest point that can possibly be measured. This is usually, but not always, the same as the height of the notch or throat. Fill in the value below.

The Upper Range Value for Level should be the same as the Maximum Level. Fill in the value below.

For the Lower Range Value for Level use 0.

Determine the Maximum Flow Rate. This is the flow rate at the Maximum Level. Fill in the value below.

Determine the Lower Range Value for Flow. This point must be on the active portion of the probe and is normally the lowest point that can be measured but cannot be less than 0. When the instrument has an analog output it is the point at which the output is 4 ma. Fill in the values below.

Determine the Upper Range Value for Flow. When the instrument has an analog output it is the point at which the output is 20 ma. If the instrument does not have an analog output the Upper Range Value should be the same as the Maximum Flow Rate.

The following values should be filled in before proceeding. They will be required during calibration.

Maximum Level: _____

Maximum Flow Rate: _____

Lower Range Value – Level: _____ 0 _____

Lower Range Value – Flow: _____

Upper Range Value – Level: _____

Upper Range Value – Flow: _____

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

Since the weir or flume configuration is to be “User Defined”, a strapping table is required. The percent of flow in increments of 5% of the level must be known before proceeding. It is recommended that these values be determined and added into the following table so that they are available when required.

All values should be based upon the Maximum Level and Volume.

STRAPPING TABLE

ENTRY #	HEIGHT PERCENTAGE	HEIGHT	FLOW	FLOW PERCENTAGE
1	5 %			
2	10 %			
3	15 %			
4	20 %			
5	25 %			
6	30 %			
7	35 %			
8	40 %			
9	45 %			
10	50 %			
11	55 %			
12	60 %			
13	65 %			
14	70 %			
15	75 %			
16	80 %			
17	85 %			
18	90 %			
19	95 %			
20	100 %			

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

**KEYPAD
ENTRY**



REMARKS

SETUP	Access Level appears in VFD line 2.
ENTER	— Limited appears in VFD line 2.
LAST ▽	— Scroll until Full appears in VFD line 2.
ENTER	— Password? appears in VFD line 2. *****->
NUMERIC	— Enter password using appropriate keys. 12345 is default password.
ENTER	— Full appears in VFD line 2.
CLEAR	Access Level appears in VFD line 2.
NEXT △	— Scroll until Measurement Mode appears in VFD line 2.
ENTER	— Level Only appears in VFD line 2.
LAST ▽	— Scroll until Level & Flow appears in VFD line 2.
ENTER	— Measurement Mode appears in VFD line 2.
NEXT △	— Scroll until PID Mode appears in VFD line 2.
ENTER	— Off appears in VFD line 2.
ENTER	— Setup Menu appears in VFD line 1. PID Mode appears in VFD line 2.
See note →	If VFD does not look like the above press CLEAR .
NEXT △	— Scroll until PV Display Variable appears in VFD line 2.
ENTER	— Level appears in VFD line 2.
NEXT △	— Scroll until Flow appears in VFD line 2.
ENTER	— PV Display Variable appears in VFD line 2.
NEXT △	— Scroll until SP Display Variable appears in VFD line 2.
ENTER	— Level appears in VFD line 2.
ENTER	— SP Display Variable appears in VFD line 2.
NEXT △	— Scroll until VFD Line 1 Variable appears in VFD line 2.
ENTER	— Output % appears in VFD line 2.
ENTER	— VFD Line 1 Variable appears in VFD line 2.






MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

**KEYPAD
ENTRY**

REMARKS

NEXT 	— Scroll until VFD Line 2 Variable appears in VFD line 2.
ENTER	— Output % appears in VFD line 2.
LAST 	— Scroll until PFM Input Counts appears in VFD line 2.
ENTER	— VFD Line 2 Variable appears in VFD line 2.
CLEAR	— XX.XX percent appears in VFD line 1 XXXXX usec appears in VFD line 2.









Setup is complete.

CALIBRATE	— Level appears in VFD line 2.
ENTER	— Units appears in VFD line 2.
ENTER	— Inches appears in VFD line 2.
 	— Scroll until desired units appears in VFD line 2.
ENTER	— Units appears in VFD line 2.
NEXT 	— Scroll until Maximum Level appears in VFD line 2.
ENTER	— Maximum Measurement appears in VFD. XX.XX->
NUMERIC	— Enter Maximum Level using appropriate keys.
ENTER	— Maximum Level appears in VFD line 2.
NEXT 	— Scroll until Upper Range Value appears in VFD line 2.
ENTER	— Upper Range Value appears in VFD. XX.XX->
NUMERIC	— Enter Upper Range Value (same as Maximum Level) using appropriate keys.
ENTER	— Upper Range Value appears in VFD line 2.
LAST 	— Scroll until Lower Range Value appears in VFD line 2.
ENTER	— Lower Range Value appears in VFD. XX.XX->
NUMERIC	— Enter Lower Range Value (0) using appropriate keys.
ENTER	— Lower Range Value appears in VFD line 2.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

**KEYPAD
ENTRY**






REMARKS

NEXT 	— Scroll until Damping Time Appears in VFD line 2.
ENTER	— Level Damping Time appears in VFD. X.X->
NUMERIC	— Enter 0. If a damping time is desired, it is recommended that it be added after the system is in operation.
ENTER	— Damping Time appears in VFD line 2.
CLEAR	— Level appears in VFD line 2.
NEXT 	— Scroll until Flow appears in VFD line 2.
ENTER	— Units appears in VFD line 2.
ENTER	— cubic feet/second appears in VFD line 2.
 	— Scroll until desired units appears in VFD line 2.
ENTER	— Units appears in VFD line 2.
LAST 	— Scroll until Element Type appears in VFD line 2.
ENTER	— V-Notch Weir appears in VFD line 2.
LAST 	— Scroll until User Defined appears in VFD line 2.
ENTER	— Strapping Table appears in VFD. Maximum Flow Rate
ENTER	— XXX.XX-> appears in VFD line 2.
NUMERIC	— Enter Maximum Flow Rate using appropriate keys.
ENTER	— Maximum Flow rate appears in VFD line 2.
NEXT 	— Scroll until Table Values appears in VFD line 2.
ENTER	— Edit Strapping Table appears in VFD. Entry # 1, 5% Level
ENTER	— X.XX-> appears in VFD line 2.
NUMERIC	— Enter the percentage of Flow at 5% of the Maximum Level using the appropriate keys.
ENTER	— Entry # 1, 5% Level appears in VFD line 2.
NEXT 	— Scroll to Entry # 2 10% Level appears in VFD line 2.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

**KEYPAD
ENTRY**

REMARKS

ENTER				X.XX-> appears in VFD line 2.
NUMERIC				Enter the percentage of Flow at 10% of the Maximum Level using the appropriate keys.
ENTER				Entry # 2, 10% Level appears in VFD line 2.
NEXT 				Scroll to next entry, press ENTER, enter value and press ENTER. Repeat until all 20 entries have been made.
CLEAR				Strapping Table appears in VFD. Table Values
CLEAR				User Defined appears in VFD line 2.
CLEAR				Element Type appears in VFD line 2.
LAST 				Scroll until Upper Range Value appears in VFD line 2.
ENTER				Upper Range Value appears in VFD. X.XX->
NUMERIC				Enter Upper Range Value (for Flow) using the appropriate keys.
ENTER				Upper Range Value appears in VFD line 2.
LAST 				Scroll until Lower Range Value appears in VFD line 2.
ENTER				Lower Range Value appears in VFD. XXX.XX->
NUMERIC				Enter Lower Range Value (for Flow) using the appropriate keys.
ENTER				Lower Range Value appears in VFD line 2.
CLEAR				Flow appears in VFD line 2.
 				Scroll until Input appears in VFD line 2.
ENTER				Two Point appears in VFD line 2.
ENTER				Lo Level Input Cal appears in VFD. X.XX->
NUMERIC				With the process in the vessel at any known level, preferably low, enter that level using the appropriate keys.
ENTER				Hi Level Input Cal appears in VFD. XX.XX->

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

**KEYPAD
ENTRY**

REMARKS

NUMERIC

With the process in the vessel raised to a higher level (preferably quite higher), enter that level using the appropriate keys.

ENTER

Two Point appears in VFD line 2.

CLEAR

Input appears in VFD line 2.

CLEAR

XX.XX percent appears in VFD line 1.
XXXXXX usec appears in VFD line 2.

Calibration is complete. Proceed to the Setting The Alarms.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

SETTING THE ALARMS

There are 4 process alarms which may be used to indicate an alarm condition at a predetermined level or flow. There are also 2 output alarms which may be used to indicate an alarm condition at a predetermined % of the 4-20 ma output span or, if no 4-20 ma output, % of span between the Lower Range Value and the Upper Range Value.







Any, or all of the alarms may be enabled. For disabled alarms use the instructions below. For enabled alarms skip this page and proceed to the next applicable page.

DISABLED ALARMS

KEYPAD

ENTRY

REMARKS

CALIBRATE	Level appears in VFD line 2.
 	Scroll until Alarms appears in VFD line 2.
ENTER	Process Alarm #1 appears in VFD line 2.
 	Scroll until desired Alarm appears in VFD line 2.
ENTER	Status appears in VFD line 2.
ENTER	Disable appears in VFD line 2.
ENTER	Status appears in VFD line 2.
CLEAR	xxxxxxx Alarm #X appears in VFD line 2.
 	If additional alarms are to be disabled, scroll until the next desired Alarm appears in VFD line 2 and repeat the above. After all desired alarms have been disabled, proceed as follows.
CLEAR	Alarms appears in VFD line 2.
CLEAR	XX.XX percent appears in VFD line 1. XXXXXX usec appears in VFD line 2.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

ENABLED ALARMS

Before proceeding, determine at which point each enabled alarm is to be set, whether it is to be LLFS (Low Level Failsafe) or HLFS (High level Fail Safe), and if it is to have a differential. Fill in the information below as this will be required when setting up the alarms.

PROCESS ALARM SETTINGS

	ALARM #1	ALARM #2	ALARM #3	ALARM #4
STATUS Enable or Disable				
MEASUREMENT Level or Flow				
FAILSAFE MODE LLFS or HLFS				
ALARM TYPE FXD or ADJ Differential				
LOW SETPOINT See Note 1 below				
HIGH SETPOINT See Note 2 below				
OFF DELAY				
ON DELAY				
OUTPUT RELAY None, #1, #2, #3 or #4				

OUTPUT ALARM SETTINGS

	ALARM #1	ALARM #2
STATUS Enable or Disable		
FAILSAFE MODE LLFS or HLFS		
ALARM TYPE FXD or ADJ Differential		
LOW SETPOINT See Note 1 below		
HIGH SETPOINT See Note 2 below		
OUTPUT RELAY None, #1, #2, #3 or #4		

NOTES:

1. LOW SETPOINT is applicable only if the alarm FAILSAFE MODE is LLFS or if the ALARM TYPE is ADJ.
2. HIGH SETPOINT is applicable only if the alarm FAILSAFE MODE is HLFS or if the ALARM TYPE is ADJ.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

ENABLED PROCESS ALARMS

**KEYPAD
ENTRY**








REMARKS

CALIBRATE	Level appears in VFD line 2.
△ ▽	Scroll until Alarms appears in VFD line 2.
ENTER	Process Alarm #1 appears in VFD line 2.
△ ▽	Scroll until desired Process Alarm appears in VFD line 2.
ENTER	Status appears in VFD line 2.
ENTER	<ul style="list-style-type: none"> Disable appears in VFD line 2.
△ ▽	<ul style="list-style-type: none"> Scroll until Enable appears in VFD line 2.
ENTER	Status appears in VFD line 2.
NEXT △	Scroll until Measurement appears in VFD line 2.
ENTER	<ul style="list-style-type: none"> Level appears in VFD line 2.
ENTER	Measurement appears in VFD line 2.
NEXT △	Scroll until Failsafe Mode appears in VFD line 2.
ENTER	<ul style="list-style-type: none"> LLFS appears in VFD line 2.
△ ▽	<ul style="list-style-type: none"> Scroll until desired Failsafe Mode appears in VFD line 2.
ENTER	Failsafe Mode appears in VFD line 2.
NEXT △	Scroll until Alarm Type appears in VFD line 2.
ENTER	<ul style="list-style-type: none"> Fixed Differential appears in VFD line 2.
△ ▽	<ul style="list-style-type: none"> Scroll until desired Alarm Type appears in VFD line 2.
ENTER	Alarm Type appears in VFD line 2.
NEXT △	<ul style="list-style-type: none"> Scroll until Low Setpoint appears in VFD line 2.
ENTER	<ul style="list-style-type: none"> Only set this feature if the alarm is for LLFS and/or has an Adjustable Differential.
ENTER	<ul style="list-style-type: none"> X.XX-> appears in VFD line 2.
NUMERIC	<ul style="list-style-type: none"> Enter Low Setpoint using appropriate keys.
ENTER	Low Setpoint appears in VFD line 2.
NEXT △	<ul style="list-style-type: none"> Scroll until High Setpoint appears in VFD line 2.
ENTER	<ul style="list-style-type: none"> Only set this feature if the alarm is for HLFS and/or has an Adjustable Differential.
ENTER	<ul style="list-style-type: none"> XX.X-> appears in VFD line 2.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

**KEYPAD
ENTRY**

REMARKS

NUMERIC	Enter High Setpoint using appropriate keys.
ENTER	High Setpoint appears in VFD line 2.
NEXT 	Scroll until Off Delay appears in VFD line 2.
ENTER	X.X-> appears in VFD line 2.
NUMERIC	Enter 0 or desired Off Delay time.
ENTER	Off Delay appears in VFD line 2.
NEXT 	Scroll until On Delay appears in VFD line 2.
ENTER	X.X-> appears in VFD line 2.
NUMERIC	Enter 0 or desired On Delay time.
ENTER	On Delay appears in VFD line 2.
NEXT 	Scroll until Output Relay appears in VFD line 2.
ENTER	NONE appears in VFD line 2.
 	Scroll until desired Relay or None appears in VFD line 2.
ENTER	Output Relay appears in VFD line 2.
CLEAR	Process Alarm #X appears in VFD line 2.
 	If additional Process Alarms are to be enabled, scroll until the next desired process Alarm appears in VFD line 2 and repeat the above. After all desired Process Alarms have been enabled, proceed as follows:
CLEAR	Alarms appears in VFD line 2.
CLEAR	XX.XX percent appears in VFD line 1. XXXXXX usec appears in VFD line 2.

If any Output Alarm is to be enabled, proceed to next page. If not, Calibration is complete.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

ENABLED OUTPUT ALARMS

**KEYPAD
ENTRY**






REMARKS

CALIBRATE	Level appears in VFD line 2.
△ ▽	Scroll until Alarms appears in VFD line 2.
ENTER	Process Alarm #1 appears in VFD line 2.
△ ▽	Scroll until desired Output Alarm appears in VFD line 2.
ENTER	Status appears in VFD line 2.
ENTER	<ul style="list-style-type: none"> Disable appears in VFD line 2. Scroll until Enable appears in VFD line 2.
△ ▽	
ENTER	Status appears in VFD line 2.
NEXT △	Scroll until Failsafe Mode appears in VFD line 2.
ENTER	<ul style="list-style-type: none"> LLFS appears in VFD line 2. Scroll until desired Failsafe Mode appears in VFD line 2.
△ ▽	
ENTER	Failsafe Mode appears in VFD line 2.
NEXT △	Scroll until Alarm Type appears in VFD line 2.
ENTER	<ul style="list-style-type: none"> Fixed Differential appears in VFD line 2. Scroll until desired Alarm Type appears in VFD line 2.
△ ▽	
ENTER	Alarm Type appears in VFD line 2.
NEXT △	Scroll until Low Setpoint appears in VFD line 2. Only set this feature if the alarm is for LLFS and/or has an Adjustable Differential.
ENTER	<ul style="list-style-type: none"> X.XX-> appears in VFD line 2. Enter Low Setpoint using appropriate keys.
NUMERIC	
ENTER	Low Setpoint appears in VFD line 2.
NEXT △	Scroll until High Setpoint appears in VFD line 2. Only set this feature if the alarm is for HLFS and/or has an Adjustable Differential.
ENTER	<ul style="list-style-type: none"> XX.X-> appears in VFD line 2. Enter High Setpoint using appropriate keys.
NUMERIC	
ENTER	High Setpoint appears in VFD line 2.

MODEL 7000 EXCALIBUR - SETUP & CALIBRATION GUIDE
LEVEL & FLOW MEASUREMENT FOR USER DEFINED WEIR OR FLUME

**KEYPAD
ENTRY**

REMARKS

NEXT 	—	Scroll until Output Relay appears in VFD line 2.
ENTER	—	— NONE appears in VFD line 2.
 	—	— Scroll until desired Relay or None appears in VFD line 2.
ENTER	—	— Output Relay appears in VFD line 2.
CLEAR	—	— Output Alarm #X appears in VFD line 2.
 	—	— If the other Output Alarm is to be enabled, scroll until it appears in VFD line 2 and repeat the above. After all desired Output alarms have been enabled, proceed as follows:
CLEAR	—	— Alarms appears in VFD line 2.
CLEAR	—	XX.XX percent appears in VFD line 1. XXXXXX usec appears in VFD line 2.

Calibration is complete.